



Firefly[®] PRO

Y1-06-0290 Rev. C

Operating Instructions

- Slide thumb switch up to turn the strobe into the ON position.
- Slide thumb switch down to turn the strobe light into the OFF position.

 
ON TOGGLE ON/OFF TO SELECT MODE

↑ STROBE [diagram of strobe mode]

↓ STEADY [diagram of steady mode]

SOS [diagram of SOS mode]

OFF MODE RESET = 5 MIN WHEN OFF

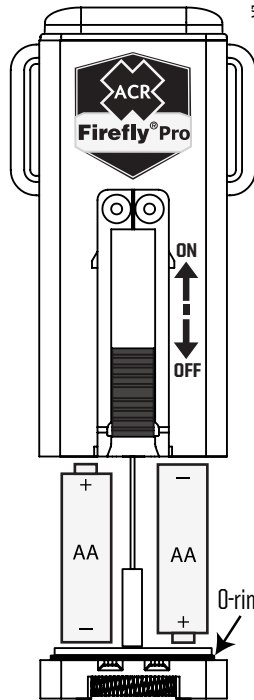

This strobe light is warranted against factory defect in material and workmanship for a period of one (1) year from the date of purchase or receipt as a gift. The warranty does not cover defects due to battery failure or leakage.

ACR Electronics, Inc.
5757 Ravenswood Road, Fort Lauderdale, FL 33312 U.S.A
Worldwide: +1 (954) 981-3333 Fax: +1 (954) 983-5087
www.ACRARTEX.com

Maintenance

- Open the battery door in a clean environment, and only to replace batteries.
- Keep battery door O-ring clean and free of debris accumulation.
- Clean battery door thoroughly if necessary to ensure watertight integrity.
- Avoid using abrasive or sharp objects to handle O-ring.
- Lubricate the entire O-ring with silicone based grease prior to closing to ensure a water-tight seal.
- Inspect O-ring periodically.
- Replace if damaged.



Firefly[®] PRO

Y1-06-0290 Rev. C

Operating Instructions

- Slide thumb switch up to turn the strobe into the ON position.
- Slide thumb switch down to turn the strobe light into the OFF position.

 
ON TOGGLE ON/OFF TO SELECT MODE

↑ STROBE [diagram of strobe mode]

↓ STEADY [diagram of steady mode]

SOS [diagram of SOS mode]

OFF MODE RESET = 5 MIN WHEN OFF

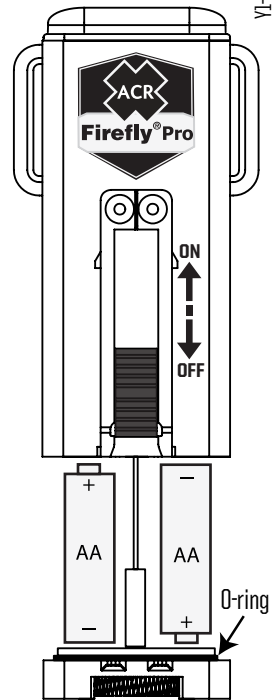

This strobe light is warranted against factory defect in material and workmanship for a period of one (1) year from the date of purchase or receipt as a gift. The warranty does not cover defects due to battery failure or leakage.

ACR Electronics, Inc.
5757 Ravenswood Road, Fort Lauderdale, FL 33312 U.S.A
Worldwide: +1 (954) 981-3333 Fax: +1 (954) 983-5087
www.ACRARTEX.com

Maintenance

- Open the battery door in a clean environment, and only to replace batteries.
- Keep battery door O-ring clean and free of debris accumulation.
- Clean battery door thoroughly if necessary to ensure watertight integrity.
- Avoid using abrasive or sharp objects to handle O-ring.
- Lubricate the entire O-ring with silicone based grease prior to closing to ensure a water-tight seal.
- Inspect O-ring periodically.
- Replace if damaged.



Firefly[®] PRO

Y1-06-0290 Rev. C

Operating Instructions

- Slide thumb switch up to turn the strobe into the ON position.
- Slide thumb switch down to turn the strobe light into the OFF position.

 
ON TOGGLE ON/OFF TO SELECT MODE

↑ STROBE [diagram of strobe mode]

↓ STEADY [diagram of steady mode]

SOS [diagram of SOS mode]

OFF MODE RESET = 5 MIN WHEN OFF

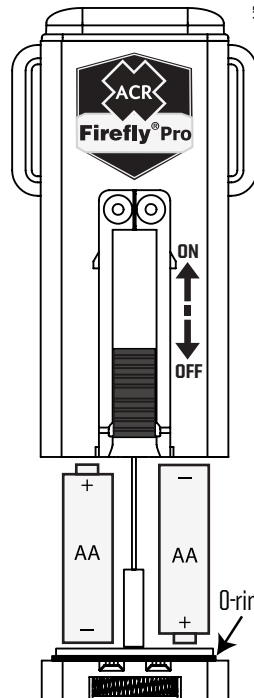

This strobe light is warranted against factory defect in material and workmanship for a period of one (1) year from the date of purchase or receipt as a gift. The warranty does not cover defects due to battery failure or leakage.

ACR Electronics, Inc.
5757 Ravenswood Road, Fort Lauderdale, FL 33312 U.S.A
Worldwide: +1 (954) 981-3333 Fax: +1 (954) 983-5087
www.ACRARTEX.com

Maintenance

- Open the battery door in a clean environment, and only to replace batteries.
- Keep battery door O-ring clean and free of debris accumulation.
- Clean battery door thoroughly if necessary to ensure watertight integrity.
- Avoid using abrasive or sharp objects to handle O-ring.
- Lubricate the entire O-ring with silicone based grease prior to closing to ensure a water-tight seal.
- Inspect O-ring periodically.
- Replace if damaged.



Firefly[®] PRO

Y1-06-0290 Rev. C

Operating Instructions

- Slide thumb switch up to turn the strobe into the ON position.
- Slide thumb switch down to turn the strobe light into the OFF position.

 
ON TOGGLE ON/OFF TO SELECT MODE

↑ STROBE [diagram of strobe mode]

↓ STEADY [diagram of steady mode]

SOS [diagram of SOS mode]

OFF MODE RESET = 5 MIN WHEN OFF

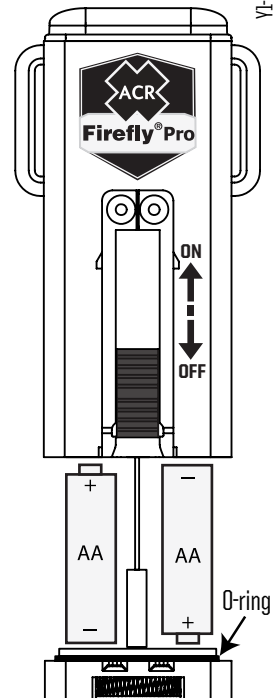

This strobe light is warranted against factory defect in material and workmanship for a period of one (1) year from the date of purchase or receipt as a gift. The warranty does not cover defects due to battery failure or leakage.

ACR Electronics, Inc.
5757 Ravenswood Road, Fort Lauderdale, FL 33312 U.S.A
Worldwide: +1 (954) 981-3333 Fax: +1 (954) 983-5087
www.ACRARTEX.com

Maintenance

- Open the battery door in a clean environment, and only to replace batteries.
- Keep battery door O-ring clean and free of debris accumulation.
- Clean battery door thoroughly if necessary to ensure watertight integrity.
- Avoid using abrasive or sharp objects to handle O-ring.
- Lubricate the entire O-ring with silicone based grease prior to closing to ensure a water-tight seal.
- Inspect O-ring periodically.
- Replace if damaged.