



ATA Pro

Technical Manual

Commercial in Confidence

Analox Limited
15 Ellerbeck Court, Stokesley Business Park,
North Yorkshire, TS9 5PT, UK
UK/RoW T: +44 (0)1642 711400 F: +44 (0)1642 713900
US T: (714) 891-4478
W: www.analox.net E: info@analox.net

Copyright © 2017 Analox Ltd. All Rights Reserved.

Analox Helpline



0800 211 8160

This support line is closed on UK public holidays



1(855) 711-4994

Revision history

Date	Rev	By	DCN	Comments	CHKD	CHKD Date	APPD	APPD Ref	APPD Date
07/12/2017	12	PJO	2017-0103	Declaration of Conformity Updated	LG	07/12/2017	-	-	-
03/05/2017	11	PJO	2017-0051	Update dimensions in specification, general tidy up of page breaks, margins etc.	DG	16/05/2017	-	-	-
27/10/2016	10	DG	2016-0081	Update Ata Pro user manual for He sensor life	PJO	02/11/2016	-	-	-
13/01/2014	09	PJO	2013-0047	Updated to suit ATA pro, DIN restrictor added as kit	-	-	-	-	-
29/09/2011	08	PJO	2011-0122	Flow rate of 0.2 – 1.0 L/m now specified	-	-	-	-	-

We are delighted to welcome you as a user of the
ATA pro

The following guide should assist you in using your
ATA pro

1. Packaging and Contents Check	2
2. About the ATA pro	3
3. Operation	4
3.1 Controls	4
3.2 Oxygen Sensor Calibration.....	5
3.3 Helium Sensor Zero Adjust	7
3.4 Analysing Your Mix	7
3.5 Accessories.....	9
4. Quick Check	10
5. After Sales Service	11
5.1 Battery Replacement.....	11
5.2 Sensor Replacement	12
5.3 Warranties.....	13
5.4 General Care.....	13
5.5 Safety Information	14
5.6 First Aid Procedures	14
5.7 Sensor Handling Information.....	14
6. Warranty Information	15
7. Specification	16
8. Altitude Correction Chart	17
9. Oxygen Compensation Chart	18
10. Disposal	19
11. Declaration of Conformity	20

1. Packaging and Contents Check

On opening your **Ax ATA pro**, please check you have the following items:

- a) **ATA pro** & Battery
- b) Flow Adaptor, Tubing & Sample Dome
- c) O₂ Compensation Card
- d) User Manual
- e) Any additional options or accessories ordered for your **Ax ATA pro**, from:
 - Storage Case: compact water proof, drop proof case ideal For storing your ATA pro and accessories
 - DIN flow restrictor

Ax ATA pro Kit



2. About the ATA pro

The **ATA pro** is designed to be a true trimix analyser, measuring the concentration of Oxygen, Helium and balance gas in your trimix. The Oxygen and Helium sensors measure in the range 0.1-100%.

The **ATA pro** has been designed to offer the highest levels of accuracy without compromising ease of use. Oxygen calibration and Helium zero adjust features are provided as standard, and Oxygen compensation is provided to ensure you get more accurate Helium readings.

Readings are displayed individually on a scroll through backlit display.

Power is provided by one AA size battery. The **ATA pro** will automatically switch off after 15 minutes to ensure battery life is not compromised if the instrument is accidentally turned on. On receipt of the **ATA pro** all you have to do is fit the battery, refer to section 5.1 Battery Replacement.

The **ATA pro** has been designed specifically for the diving industry where hostile environmental conditions are the norm not the exception.


3. Operation

3.1 Controls

The analyser is fitted with an on/off button located on the front of the unit. To turn the unit on press the button once, the unit will automatically turn off after 15 minutes, to prevent accidental battery drainage. Alternatively the unit can be turned off by pressing and holding the on/off button for 3 seconds.

When the analyser is switched on it will display a reading and a marker indicating which gas is being displayed, O₂, He or BAL.

Do not use the **ATA pro** before calibration (see section 3.2 Oxygen Sensor Calibration).

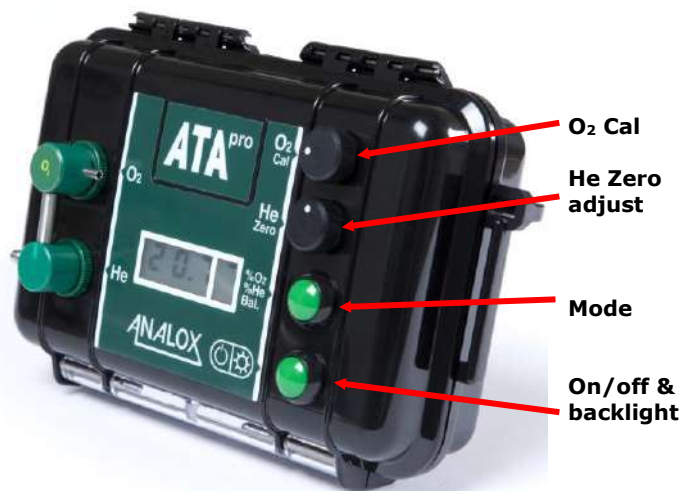

The on/off button also turns the backlight on and off, the backlight will automatically turn off after 30 seconds.

The low battery warning is shown by 'bAt L' on the display. When present, change the battery before using the instrument (see section 5.0 After Sales Service).

Waterproof calibration and zero adjustment knobs are located on the front of the instrument for Oxygen and Helium sensor adjustments. Turn them fully from left to right and then fully left, the reading should increase and then decrease. (If the reading does not change see section 4.0 Quick Check). When the Helium sensor adjustment is fully left the instrument display may show 'Err', this is not a fault if the display returns to numbers when the adjustment is set to the mid-point

WARNING

Do NOT use when the LOW BATTERY symbol is on!

3.2 Oxygen Sensor Calibration

Oxygen sensor calibration in clean air is essential before every use and is performed as follows;

1. Remove the flow adaptor from the sensors.
2. Expose the analyser to clean air for two minutes and adjust the calibration knob until the display reads the correct value using the oxygen compensation chart (you can find this chart on the inside of the back cover). If this is not possible refer to paragraph 3 below or to sections 4.0 Quick Check and 5.0 After Sales Service.



O₂ calibration in clean air

3. It is possible that at very high altitude normal calibration is not achievable. In this event you must ascertain the actual pressure in BAR and multiply the atmospheric oxygen percent (20.9%) by this pressure and set the reading during calibration to the calculated level (this is the surface equivalent oxygen percentage). An altitude correction chart is shown for reference on page 22. When you measure the level of oxygen in the sample you must divide the reading by the same atmospheric pressure value to obtain the true percentage of Oxygen in your sample.

For Example: At an atmospheric pressure of 0.8bar, the surface equivalent oxygen percentage is
 $20.9\% \times 0.8 = 16.7\%$ O2 Surface Equivalent. If the reading you then obtain from your sample is 32.0% you must divide this by 0.8 to obtain the true Oxygen percentage, $32.0/0.8 = 40.0\%$ O2 True Percentage.

WARNING

**The analyser is sensitive to Oxygen partial pressure.
Calibration must always be carried out at the same
atmospheric pressure as Oxygen measurement.**

3.3 Helium Sensor Zero Adjust

The Helium sensor zero adjust enables you to retain the accuracy of the analyser over its operational life, as the sensor ages.

1. Remove the flow adaptor from the sensors.
2. Use the mode button to change the display to read Helium.
3. Expose the analyser to clean air for two minutes and adjust the calibration knob until the display reads 0.0. If the Helium sensor adjustment is turned too far to the left the instrument display may show 'Err', this is not a fault, just return the adjustment to the mid-point then re-adjust for a reading of 0.0

3.4 Analysing Your Mix

The **ATA pro** is provided with a flow adaptor and tubing which can be connected to the gas Sampling Dome.

1. Ensure the **ATA pro** has been calibrated as per the instructions in sections 3.2, and 3.3.
2. Push the flow adaptor into the sensors, as per the picture over the page.
3. Attach the tubing from the flow adaptor to the Sampling Dome
4. Very slowly open the Tank valve until gas can just be heard quietly hissing out.
5. Press the sampling dome firmly against the tank outlet.



6. Allow approx. 10-15 seconds for the reading to stabilise on the display, and take the O2 reading.

7. Use the mode button to change the display to read the Helium concentration. Ensure the readings are stable and take the He reading
8. Use the mode button to change the display to show the balance gas (BAL.), i.e. the inferred Nitrogen concentration. Take your reading and close the tank



Analysing your mix

9. If in doubt repeat the procedure taking care to ensure a gas flow of between 0.2 and 1.0 l/m.
10. If you wish to carry out multiple cylinder checks, to re-zero the sensors, you will need to remove the flow adaptor. This will allow the previous gas mix to quickly vent into the atmosphere.

WARNING

Very high flows may pressurise the sensors and inaccurate readings or sensor damage will result.

3.5 Accessories

The **ATA pro** can be supplied with any of the following accessories;

- a) Storage case; compact water proof, drop proof case ideal for storing your **ATA pro**, and accessories.

Part number: SA2ATACASE

- b) *DIN flow restrictor kit – Comprising DIN flow restrictor, 0.2 to 1.2 l/m flow meter*

& 1m neoprene tubing

Part number: 6000-0197K

4. Quick Check

SYMPTOM	CONDITION	ACTION
'bAt L' symbol flashing intermittently on display	Low battery	Change battery
No display	Switched off Bad connection	Switch on Check battery connection Return to supplier
Zero reading on O2	O2 Sensor disconnected O2 sensor polarity incorrect O2 Sensor expired No Oxygen	Check connection Check sensor is connected correctly Change sensor Check in air and ensure sensor face is free from obstruction
'Err' shown on helium display	He Zero knob turned too far left Helium sensor disconnected Helium sensor fault	Turn knob to mid point before calibrating Check connection Carry out He coarse calibration Return to supplier
He Reading is negative	Zero Adjust required	Adjust the reading using the He zero pot on the front If still negative Recalibrate using internal pots
Reading erratic	Pressure on sensor Radio transmission Sensor old or faulty Condensation on sensor	Check flow Move unit away Change sensor Dry sensor face
Reading does not change when calibration knob is turned	Faulty connections Sensor failure	Return to supplier Change O2 sensor Recalibrate the Helium sensor using internal pots
Display segments missing	Display faulty	Return to supplier
Will not calibrate	Sensor faulty Sensor not in air High altitude	Change sensor Check flow adapter is correct Calculate percent equivalent = 20.9% x bar
Reading drifts	Rapid temperature change	Do not move analyser from one temperature to another immediately before use

5. After Sales Service

5.1 Battery Replacement

- a) In a clean, dry environment, open the analyser case.
- b) Remove the cover from the battery holder
- b) Slide the battery out of its holder.
- c) Push in the new battery, ensuring the polarity is correct (Shown on battery holder).
- d) Refit the battery cover
- d) Close the lid.
- e) Ensure the unit is turned off after fitting the battery.



5.2 Sensor Replacement

O₂ sensor

- a) Replacement sensor part number: 9100-9212-94.
- b) In a clean, dry environment, open the analyser case.
- c) Disconnect the O₂ sensor from the circuit board.
- d) Unscrew the O₂ sensor locking ring on the front face of the analyser.
- e) Pull out the O₂ sensor.
- f) Dispose of the old sensor according to local regulations for Lead and Potassium Hydroxide solution.
- g) Remove the new sensor from its pack and check it for leaks, check the sensor has a rubber o-ring fitted at the base of the thread on the front of the sensor. Push the sensor through the hole in the lid and screw on the locking ring.
- h) Connect to the circuit board.
- i) Close the lid.

He Sensor

- a) Replacement sensor part number: 9100-4535
- b) In a clean, dry environment, open the analyser case.
- c) Disconnect the He sensor from the circuit board.
- d) Unscrew the He sensor locking ring on the front face of the analyser.
- e) Pull out the He sensor, and dispose of it.
- f) Remove the new sensor from its pack, check the sensor has a rubber o-ring fitted at the base of the thread on the front of the sensor. Push the sensor through the hole in the lid and screw on the locking ring.
- g) Connect sensor to the circuit board and carry out He coarse calibration.

He coarse calibration

- a) Turn the **Ax ATA pro** on and calibrate the O₂ sensor in clean air, as per the instructions in section 3.2
- b) Change the display to show the Helium concentration, and expose the He sensor to clean air.
- c) Adjust the external zero adjust pot to the mid-point.
- d) Adjust the internal zero potentiometer until the display reads 0.0.
- e) Expose the sensor to span gas i.e. 100% Helium and allow the reading to stabilise.
- f) Adjust the internal Span potentiometer until the display reads 100, or the concentration of Helium in the span gas.
- g) Close the lid.

5.3 Warranties

The **ATA pro** is supplied with a 2 year electronics warranty. The He sensor is supplied with a 1 year warranty, and the O2 sensor is supplied with a 3 year graded warranty detailed below.

1 year	Free replacement
12-18 months	75% credit towards a replacement sensor
18-24 months	50% credit towards a replacement sensor
24-36 months	25% credit towards a replacement sensor

5.4 General Care

Although designed to be water resistant the **ATA pro** should not be intentionally immersed in liquid or left outside unprotected.

To clean the **ATA pro** use a damp soft cloth.

Protect the **ATA pro** from long periods of direct sunlight and do not subject it to high or low temperature extremes.

The O2 sensor in the **Ax ATA pro** is an electrochemical device and contains a caustic electrolyte. Always check to make sure that it is not leaking and do not allow it onto any part of your body or clothing. In the event that you do come into contact with the electrolyte wash the contaminated part with copious amounts of water (see 5.5 Safety Information).

ANALOX 9100-9212-94
OXYGEN SENSOR



WARNING
If after handling the sensor your fingers or other parts of your body feel slippery or stings wash with a lot of water.

If stinging persists get medical attention!

5.5 Safety Information

When the life of the battery has expired it should be disposed of safely in accordance with local regulations.

When the life of the O₂ sensor has expired or it is leaking or otherwise damaged it must be disposed of safely in accordance with local regulations.

The O₂ sensor contains KOH (Potassium Hydroxide) solution which is hazardous and can have the following effects:

Skin	Potassium Hydroxide is corrosive - skin contact could result in a chemical burn.
Ingestion	Can be harmful or FATAL if swallowed.
Eye	Contact can result in the permanent loss of sight.

5.6 First Aid Procedures

Skin	Wash the affected part with a lot of water and remove contaminated clothing. If stinging persists get medical attention.
Ingestion	Drink a lot of fresh water. Do not induce vomiting. Get medical attention.
Eye	Wash with a lot of water for at least 15 minutes and get medical help immediately.

5.7 Sensor Handling Information

ATA pro oxygen sensors are normally supplied in sealed packs. Before the pack is opened check that the sensor has not leaked. The sensors are themselves sealed and do not under normal circumstances present a health hazard however if leakage of the Potassium Hydroxide electrolyte has occurred use rubber gloves and wear chemical splash goggles to handle and clean up. Rinse contaminated surfaces with water.

6. Warranty Information

We provide the following Warranties for the **ATA pro**:

- A 3 year graded Oxygen sensor warranty.
- A 1 year Helium sensor warranty
- A 2 year electronics warranty.

In both cases the Warranty period runs from the date of our Invoice.

We warrant that the equipment will be free from defects in workmanship and materials.

The Warranty does not extend to and we will not be liable for defects caused by the effects of normal wear and tear, erosion, corrosion, fire, explosion, misuse, use in any context or application for which the equipment is not designed or recommended, or unauthorised modification.

Following a valid Warranty claim in accordance with the above, the equipment, upon return to us, would be repaired or replaced without cost or charge but in our discretion we may elect instead to provide to you which ever is the lesser of the cost of replacement or a refund of net purchase price paid as per our Invoice on initial purchase from us. We shall have no liability for losses, damages, costs or delays whatsoever. We shall have no liability for any incidental or consequential losses or damages. All express or implied warranties as to satisfactory or merchantable quality, fitness for a particular or general purpose or otherwise are excluded and no such Warranties are made or provided, save as set out in this Clause 7.

In order to effectively notify a Warranty claim, the claim with all relevant information and documentation should be sent in writing to:

Analox Sensor Technology Limited
15 Ellerbeck Court
Stokesley Business Park
Stokesley
North Yorkshire
TS9 5PT

Or by e-mail to : analoxastinfo@analox.net
Or by Fax to : +44 1642 713900

We reserve the right to require from you proof of dispatch to us of the notification of Warranty claim by any of the above alternative means.

The equipment should not be sent to us without our prior written authority. All shipping and Insurance costs of returned equipment are to be born by you and at your risk. All returned items must be properly and sufficiently packed.

7. Specification

RANGE:	0.1- 100% O ₂ , 0.1-100% He
ACCURACY	O ₂ - +/-1% of Reading, +/-0.2% of O ₂ at STP He - +/-1% of Full Scale at STP
RESOLUTION	0.1%
WARM UP TIME	< 15 seconds
RESPONSE TIME	90% in less than 15 seconds
O ₂ SENSOR TYPE	Analox 9100-9212-94 EC sensor
O ₂ SENSOR LIFE	up to 4 - 5 years in air. 36 month graded warranty
He SENSOR TYPE	Analox 9100-4535 TC sensor
He SENSOR LIFE	up to 10 years with normal use and avoidance of mechanical shock 12 month warranty
POWER (Standard)	1.5V AA size Alkaline Battery
BATTERY LIFE	50 hours
OPERATING TEMP	0 to 50°C / 32 to 122°F
STORAGE TEMP	-5 to 50°C / 23 to 122°F
WEIGHT	0.4kg
DIMENSIONS (mm)	195 (l) x 130 (w) x 62 (d) (7.28 x 5.12 x 2.5")
Certification	CE marked
IP RATING	IP65

If you have any comments or queries about the **ATA pro** please contact us;

UK/RoW Tel: +44 (0)1642 711400 Fax: +44 (0)1642 713900

US Tel: (714) 891-4478

Email UK: analoxast@analox.net

Email US: analoxus@analox.net

or visit our website;

www.analoxsensortechnology.com

or visit;

<https://customersupport.analox.net/>
to view the ATA pro solutions database


8. Altitude Correction Chart

Altitude		Pressure	Atmospheric O2 concentration	
Feet	Meters	in Bar	PP O2 mbar	SEV %O2
-1000	-305	1.03	217	21.67
0	0	1	209	20.9
1000	305	0.97	202	20.16
2000	610	0.94	194	19.43
3000	914	0.92	187	18.73
4000	1219	0.89	181	18.05
5000	1524	0.86	174	17.39
6000	1829	0.84	168	16.75
7000	2134	0.81	161	16.13
8000	2438	0.79	155	15.53
9000	2743	0.76	149	14.94
10000	3048	0.74	144	14.38
11000	3353	0.72	138	13.83
12000	3658	0.69	133	13.3
13000	3962	0.67	128	12.78
14000	4267	0.65	123	12.28
15000	4572	0.63	118	11.8
16000	4877	0.61	113	11.33
17000	5182	0.59	109	10.88
18000	5486	0.57	104	10.44
19000	5791	0.55	100	10.02
20000	6096	0.53	96	9.61

Pressure will vary depending on altitude, but will not lead to significant error in your readings.

Copyright © 2002: Analox Group, 15 Ellerbeck Court, Stokesley Business Park, North Yorkshire, UK. TS9 5PT. *All Worldwide Rights Reserved.*

9. Oxygen Compensation Chart

		Oxygen compensation chart for moisture in the atmosphere Atmosphere Oxygen percent in relation to temperature and relative humidity										
		Temp °F	32	40	50	60	70	80	90	100	110	120
		Temp °C	0	4	10	16	21	27	32	38	43	49
% Relative Humidity	Atmospheric Oxygen Percent											
	10	20.9	20.9	20.9	20.9	20.8	20.8	20.8	20.8	20.7	20.7	20.7
	20	20.9	20.9	20.8	20.8	20.8	20.8	20.7	20.6	20.5	20.4	20.4
	30	20.9	20.8	20.8	20.8	20.7	20.7	20.6	20.5	20.4	20.2	20.2
	40	20.8	20.8	20.8	20.7	20.7	20.6	20.5	20.4	20.2	20.2	19.9
	50	20.8	20.8	20.8	20.7	20.6	20.5	20.4	20.2	20.0	20.0	19.7
	60	20.8	20.8	20.7	20.7	20.6	20.5	20.3	20.1	19.8	19.8	19.5
	70	20.8	20.8	20.7	20.6	20.5	20.4	20.2	19.9	19.6	19.6	19.2
	80	20.8	20.8	20.7	20.6	20.5	20.3	20.1	19.8	19.5	19.5	19.0
	90	20.8	20.7	20.7	20.6	20.4	20.3	20.0	19.7	19.3	19.3	18.7
	100	20.8	20.7	20.6	20.5	20.4	20.2	19.9	19.5	19.1	19.1	18.5
H ₂ O at 100% RH	If the temperature and RH axis meet in this part of the chart, calibrate to the chart % O ₂ level or with dry air to maintain 0.5% O ₂ accuracy in NITROX											
		0.6	0.8	1.2	1.8	2.5	3.4	4.7	6.5	8.6	11.5	

Copyright © 1996-2009: Analox Group, 15 Ellerbeck Court, Stokesley Business Park, North Yorkshire, TS9 5PT UK. *All Worldwide Rights Reserved.*

10. Disposal



According to WEEE regulation this electronic product can not be placed in household waste bins. Please check local regulations for information on the disposal of electronic products in your area.

11. Declaration of Conformity

Declaration of conformity

Declaration number: HEL-908-01

Manufacturer's name: Analox Limited

Manufacturer's address: 15 Ellerbeck Court
Stokesley Business Park
Stokesley
North Yorkshire
TS9 5PT

It is declared that the following product:

Product name: ATA Pro

Product code: ATAPROAYYA

Conforms to all applicable requirements of: EN50270:2015 for Type 1 & 2
Equipment
EN 61000-6-3:2007+A1:2011

- Complies with the requirements of the EMC Directive 2014/30/EU
- Complies with the requirements of the RoHS2 Directive 2011/65/EU
- Complies with the requirements of the WEEE Directive 2012/19/EU

CE The above product is CE-marked and satisfies
the relevant legislative requirements of the
European Economic Area (EEA)



Signed on behalf of: Analox Limited

Date: 4th December 2017

Signed:

A handwritten signature in blue ink, appearing to read 'wml', followed by a long horizontal line extending to the right.

Name: Mark Lewis

Position: Managing Director

