


SPECIFICATIONS

ITEM	CO25 LAND MODEL		CO23 UNDER WATER	
	U.S.A.	METRIC	U.S.A.	METRIC
OUTPUT CAPACITY	14 in wheel	35.6 cm	10 in wheel	25.4 cm
INPUT FLOW RANGE	7 - 9 gpm	26 - 34 lpm	10-15 gpm	38-57 lpm
INPUT PRESSURE	1500 - 2000 psi	105 - 140 bar	1500 - 2000 psi	105 - 140 bar
OPTIMUM FLOW	8 gpm	30 lpm	15 gpm	57 lpm
WEIGHT	20.00 lbs.	9.1 kg	23 lbs.	10.4 kg
LENGTH	21 in	53.3 cm	19 1/2 in	49.5 cm
WIDTH	11 in	28 cm	11 in	27.9 cm
MOTOR	HYREVZ™ Gear		HYREVZ™ Gear	
PORTING	8 SAE O-Ring		8 SAE O-Ring	
CONNECTOR	3/8 in Male Pipe Hose End		1/2 in Male Pipe Hose	

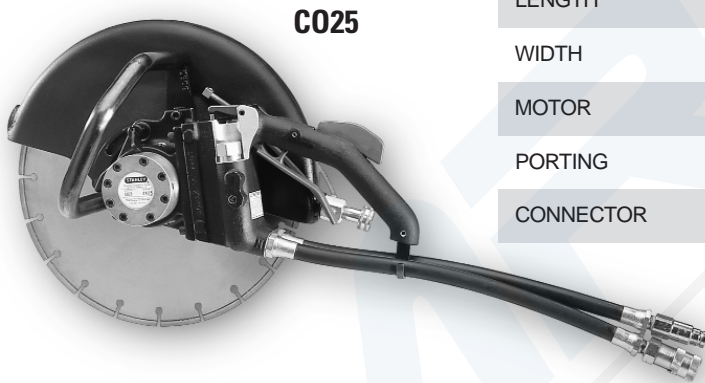

Lightweight and Powerful, the Stanley **CO23** Underwater and **CO25** Cutoff Saws are ideal for cutting concrete, masonry, pipe, structural steel beams and guardrail.

CO25 Land Model

Multi-Hand Position Cast Aluminum Handle with Interlocking Safety Trigger provides ergonomic grip at a variety of tool angles for reduced operator fatigue.

Tamper-Proof Flow Control meets ANSI specification for speed control, reducing the risk of over-speeding the cutting wheel.

Cutoff Saws can be used with readily available standard abrasive wheels and wet or dry diamond blades.

Internal Blade Brake retards spindle rotation upon release of trigger to greatly reduce wheel coast time.

Adjustable Cast Aluminum Wheel Guard is designed to provide excellent durability, allow cutting near obstructions and minimize tool weight. Available Handle Extension Kit provides for upright operation to meet operator preference.

Saw Cart (illustrated on reverse)

Saw Cart with a **CO25** makes the ideal tool combination for accurate dimensional cutting of concrete flat work.

Heavily Weighted Frame of the Stanley Saw Cart provides a stable platform for slab cutting. Handle - Mounted Control provides convenient adjustment of cutting depth.

CO23 Underwater

The **CO23** direct-drive Cutoff Saw is ideal for accurate dimensional cutting of concrete, structural steel, and pipe in underwater applications.

ACCESSORIES

PART NO.	DESCRIPTION
03694	10 in/25.4 cm dia, CO23 Masonry Cutting Diamond Wheel
04116	10 in/25.4 cm dia, CO23 Masonry Cutting Abrasive Wheel Fast Cut
04117	10 in/25.4 cm dia, CO23 Masonry Cutting Abrasive Wheel Long Wear
02691	14 in/35.6 cm dia, CO25 Metal Cutting Abrasive Wheel, 1 in arbor
02692	14 in/35.6 cm dia, CO25 Masonry Cutting Abrasive Wheel, 1 in arbor
34175	Handle Extension Kit
33228	Water Attachment
33474	Water Tank Kit for Saw Cart
33281	Saw Cart



ORDERING INFORMATION

PART NO.	DESCRIPTION
CO23341	Cutoff Saw Underwater, 1 in Arbor
CO25141	Cutoff Saw, Counter-Clockwise Rotation, 1 in Arbor
CO25541	Cutoff Saw, Clockwise Rotation, 1 in Arbor

Note: All above are Open-Center system.

All Stanley Hydraulic Tools, Parts, Accessories and allied equipment are subject to design improvements, specification and price changes at any time without notice and with no obligation to units already sold. Weights, dimensions and operating specifications listed herein are subject to change without notice. Where specifications are critical to your application, please consult Stanley Hydraulic Tools.

Call the Stanley Hydraulic Tools dealer nearest you...

**Stanley
Hydraulic Tools**

3810 SE Naef Road
Milwaukie, OR 97267-5698

Tel 503-659-5660
Fax 503-652-1780

STANLEY[®]

WARRANTY

Stanley Hydraulic Tools and their associated parts are warranted against defects in materials and workmanship for a period of twelve months from the date of purchase. Stanley Hydraulic Tools reserves the right to repair or replace only those parts which prove to have been defective at the time of purchase. This warranty becomes void if maximum flow and pressure ratings are exceeded.



SAWCART