


HYDRAULIC POWER UNITS AND HOSE REELS

Hydraulic Power Unit Assembly

HPU1416KAS-ASSY

Our hydraulic power unit is driven by a Kubota D1005 water cooled engine with air starter. It is a rugged skid mounted diesel hydraulic power package designed for providing hydraulic flow for operating a variety of tools and equipment. Models are available with single and dual circuits. The unit comes standard with a 40 gallon reservoir, powder coated steel tubular skid with drip pan and lifting eyes. It has an adjustable flow control with built-in relief valve and flow meter.

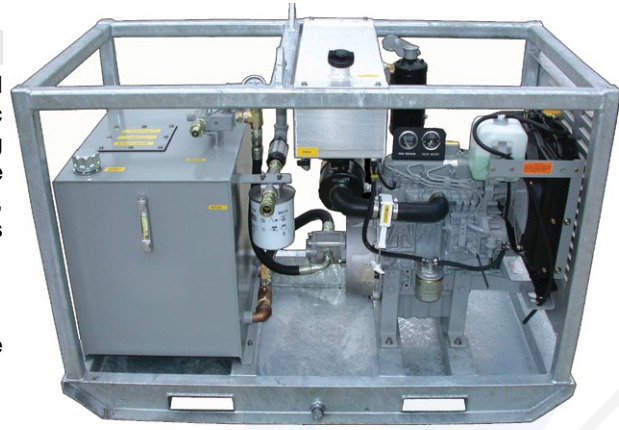

Features

- Powered by a Kubota D1005 3 cyl. Water Cooled Diesel Engine 22.5 HP at 3000 RPM
- Air Start
- Manual Air Shutdown
- Spark Arrestor
- 14-16 GPM at 2000 PSI
- 40 Gallon Reservoir
- Oil Site/Temp Gauge
- Suction Strainer
- Flow Control with Adjustable Relief Valve
- Inline Flow Meter
- Return Filter
- 0-3000 Stainless Steel Pressure Gauge
- Heavy Duty Gear Pump
- Mounted in a powder coated Steel Tubular Skid with Drip Pan and Lifting Eyes
- Aluminum fuel tank and rail guard

Specifications

Dimensions 47.5 in. H x 32 in. W x 60.5 in. D

Weight 1200 lbs

Hydraulic Hose Reel 300 ft.

HHR300-ASSY

HHR 300 Reel is a light, compact unit for smaller lengths of hydraulic hose. The reel is equipped with 2 pad eyes for lifting 15 feet whips to go to the hydraulic unit and all plumbing. This unit is powder coated for long life offshore and weighs 600 pounds.



Options

- Aluminum drip pan
- Galvanized

Specifications

Dimensions 42 in. H x 58 in. W x 44 in. D

Weight 600 lbs

Hydraulic Hose Reel 600 ft.

HHR600-ASSY

Reels can be purchased with or without hydraulic hose or oil filled. Each reel is powder coated for years of life, comes with heavy-duty pillow bearings, bottom skid, 15 feet whips, quick disconnects and weighs 1600 pounds.



Options

- Aluminum drip pan
- Galvanized

Specifications

Dimensions 48 in. H x 70 in. W x 61 in. D

Weight 1600 lbs