


AMCOMMAND II PNEUMO PANEL CALL-OUT

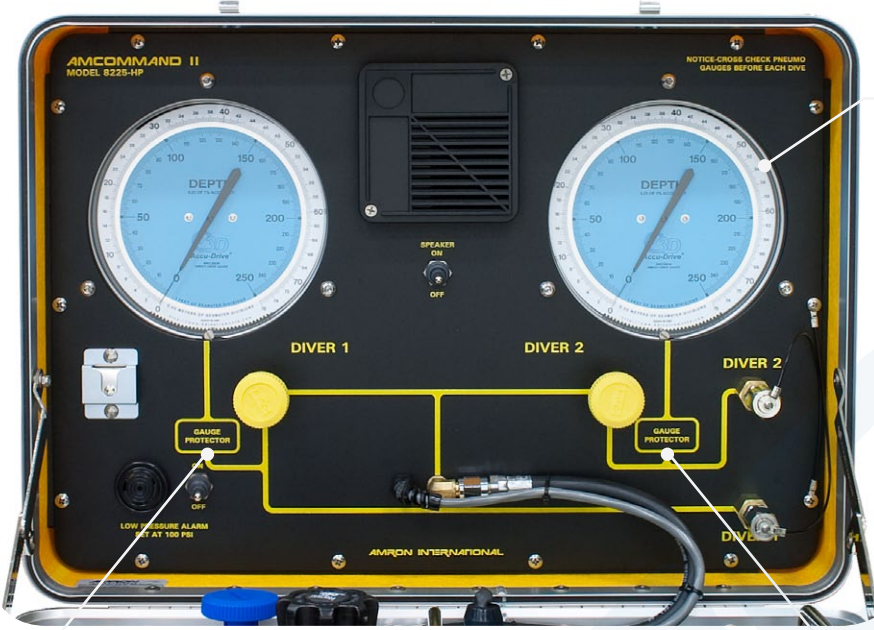


Pneumo Gauges

Pneumo Gauges have a 6 in. dial, dual scale 0-250 FSW/0-76 MSW, with 1 ft. calibration increments. The accuracy of the gauge is 0.25% of full scale. Gauges are supplied with calibration certificates traceable to the National Bureau of Standards.

Gauge Protector

The Amcommand II™ Pneumo section has gauge protectors to protect the pneumo gauges from over pressurization. Each pneumo gauge is protected by an automatic valve which is factory set to shut off all pressure to the gauge when the pressure reaches or exceed the set point.

AMCOMMAND II PANEL CALL-OUT

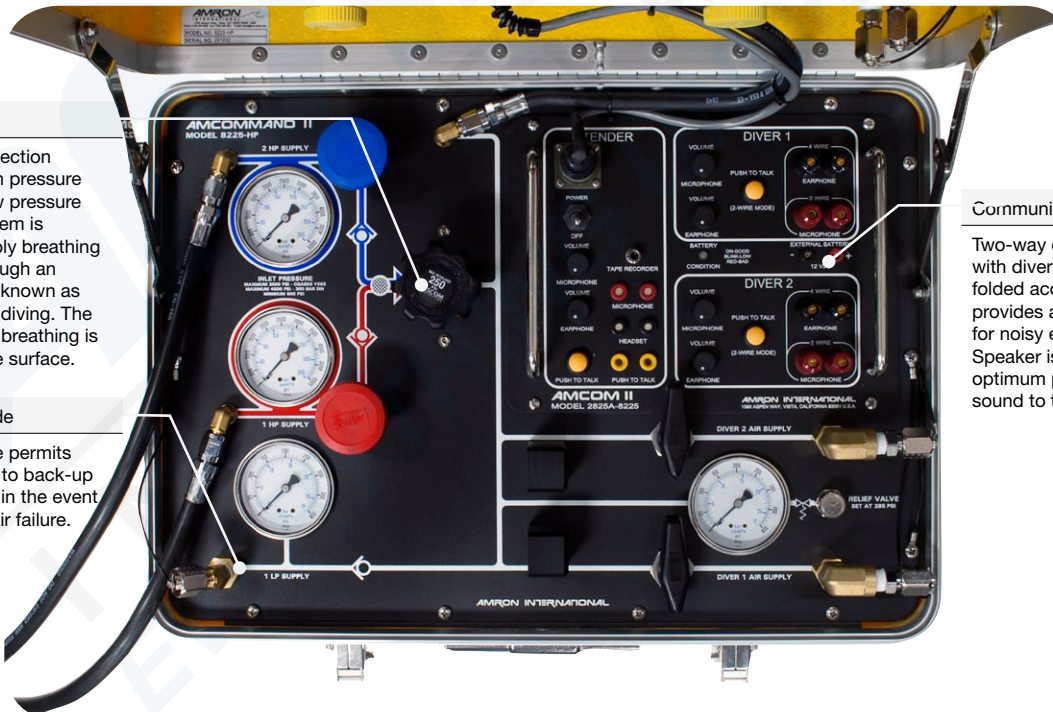

Air Control

The Air Control Section consists of a high pressure section and a low pressure section. The system is designed to supply breathing air to a diver through an umbilical. This is known as surface supplied diving. The air the divers are breathing is supplied from the surface.

Low Pressure Side

Input check valve permits simple switching to back-up high pressure air in the event of low pressure air failure.

Communications

Two-way communications with divers. High power folded acoustic horn, provides ample volume for noisy environments. Speaker is mounted in the optimum plane to direct sound to the operator.