

# AMRON

INTERNATIONAL



**3-DIVER AIR CONTROL**  
Designed to meet IMCA guidelines

# Amron International 3-Diver Air Control

Designed to meet IMCA guidelines



## Pneumo System


Pneumo Gauges have a 6 in. dial, dual scale 0-250 FSW/0-76 MSW, with 1 ft. calibration increments. The accuracy of the gauge is 0.25% of full scale. Gauges are supplied with certificates traceable to the National Institute of Standards and Technology.

## Amcom III 3-Diver Radio

The Amron International Amcom™ III 3-Diver Radio is the most versatile and powerful three diver communicator on the market today. The most unique feature of the 2830A series is separate channels and volume control for each diver and the tender for both uplink and downlink paths. The volume can be set individually for each diver and tender to a level that is optimal for them.

## Air Control

The Model 8330i features independent high and low-pressure air supplies for all 3 divers. The inclusion of crossover valves between the 3 air supplies, each of which has been designed by Amron to safely accommodate up to 3 divers by itself at one time, provides dual backups in the event of an emergency affecting 1 or 2 divers, such as air supply contamination or failure.

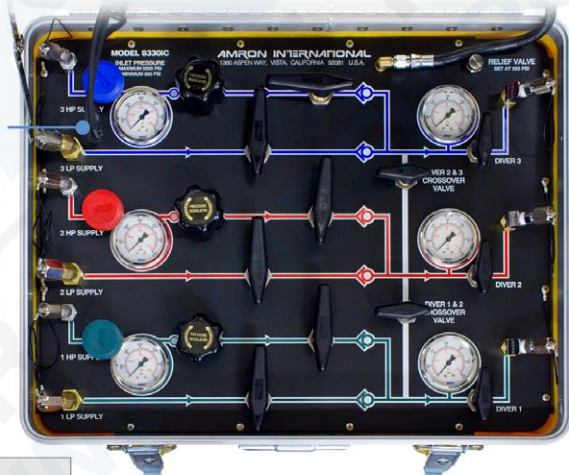

Amron 3-Diver Air Control

8330I Amron 3-Diver Air Control

8330IC Amron 3-Diver Air Control with Communicator

**AMRON**  
INTERNATIONAL  
EVERYTHING UNDER PRESSURE™