

Cygnus 2 Hands Free Multiple-Echo Ultrasonic Thickness Gauge

Measures metal thickness to determine wastage or corrosion accurately, quickly and without removing protective coatings



"Simplicity through technology"



NEW CYGNUS 2 HANDS FREE MULTIPLE-ECHO THICKNESS GAUGE

The NEW Cygnus 2, with its end-mounted OLED multi-functional display makes it ideal for hands free operation. Ideally suited for climbing and rope access applications.

The twin shot injection molded enclosure has a soft but durable TPE outer skin which is both comfortable and extremely durable while the inner shell is strong, keeping the electronics totally sealed from the outside world.

Perfect for use on flat surfaces or pipes. Our Multiple-Echo single crystal probe technology means you can measure through thick coatings and only the remaining metal thickness is displayed.



Simple to use - just turn on and go!




KEY FEATURES

- Multiple-Echo for reliable, accurate through coating measurements
- OLED multi-functional display with improved readability in all lighting conditions
- Extremely rugged enclosure - shock and impact to MIL STD 810G
- Environment sealing to IP67 - MIL STD810G
- Cygnus echo-strength bars assist thickness measurements
- Deep-coat mode - measures through coatings up to 20 mm ($\frac{3}{4}$ " thick
- TPE over molded enclosure
- Buttons designed for minimum of 100,000 depressions
- Fully sealed battery compartment (contains any leaking battery fluids).

MULTIPLE-ECHO MEASURING MODE

- Measures remaining metal thickness of corroded and coated structures
- All measurements are error checked using 3 return echoes to give repeatable, reliable results
- Accepted by all major classification societies
- Echo strength indicator to aid measurement.

With Multiple-Echo, readings are taken by measuring the time delay between any three consecutive back-wall echoes. The time of T1 (coating thickness) is ignored. The times of T2 and T3 are equal to the time that it takes to travel through the metal. Only by looking at three echoes can the measurements be automatically verified (where $T2 = T3$).

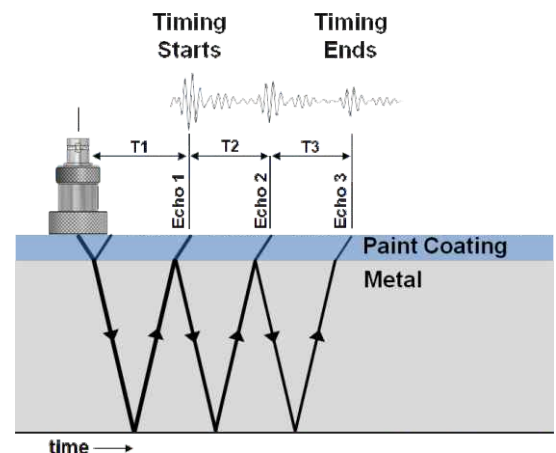

SPECIFICATION

Materials	Sound velocities between 2000 m/s - 9000 m/s (0.079 in/ms - 0.35 in/ms) - covers virtually all common engineering materials
Accuracy	±0.1 mm (±0.004") or 0.1% of thickness measurement, whichever is greatest, when calibrated in accordance with Cygnus Instruments calibration procedure
Resolution	0.1 mm or 0.05 mm (0.005" or 0.002")
Probes	Single crystal probes: 6 mm (¼") - 5.0 MHz (S5A) 13 mm (½") - 2.25 MHz (S2C (standard)), 3.5 MHz (S3C) or 5.0 MHz (S5C) 19 mm (¾") - 2.25 MHz (S2D)
Measurement Range in Steel	Single crystal probes: 3 mm - 250 mm (0.120" - 10.00") with 2.25 MHz probe (S2C/D) 2 mm - 150 mm (0.080" - 6.000") with 3.5 MHz probe (S3C) 1 mm - 50 mm (0.040" - 2.000") with 5.0 MHz probe (S5C/A)
Connector	1 x Lemo 1
Power	3 x AA batteries
Battery Life	10 hours minimum
Electronics	Dual channel pulser
Display	End-mounted OLED (rotatable)
Size	132 mm x 82 mm x 34 mm (5.20" x 3.23" x 1.34")
Weight	300 grams (10.58 oz) inc. batteries
Operating Temp.	-10°C to 50°C (14°F to 122°F)
Environmental Rating	IP67 MIL STD 810G Method 501.6 (high temp +55°C) MIL STD 810G Method 502.6 (low temp -20°C) MIL STD 810G Method 507.6 (humidity 95%) MIL STD 810G Method 512.6 (immersion - 1 metre for 30 mins)
Shock and Impact	MIL STD 810G Method 514.7 (vibration - 1 hour each axis) MIL STD 810G Method 516.7 (shock 20g - 11ms half sine shock pulse, 40g 11ms in each axis) MIL STD 810G Method 516.7 (26 drops - transit drop 1.22 m)
Compliance	CE, British Standard BS EN 15317:2013 (specification for the characterization and verification of ultrasonic thickness measuring equipment)
Environmental	RoHS, WEEE compliant
Warranty	3 years on gauge and 6 months on probe

*Specifications are subject to change

CYGNUS PROBES AND CABLES

Cygnus Stainless Steel INOX Probes

The INOX probes have an updated ergonomic design and an easier to read frequency, identification and serial numbering. All frequencies of INOX probes have a black face and a color coding system to identify probe frequencies.

Cygnus Cables

Using standard industry connectors the probe lead uses a custom made over molded cable that offers superior flexibility and resistance to oils and ultraviolet light. The cable will not stiffen after exposure to ultraviolet light.



STANDARD KIT CONTENTS

Cygnus ultrasonic thickness gauge; padded carry case; operating manual; adjustable neck strap and loops; wrist strap; accessory pouch; spare membranes; surface and membrane couplant; test block; 3 x AA batteries; optional Krusell® belt clip and attachments accessory.

Cygnus Regional Offices

Cygnus Headquarters

Cygnus Instruments Ltd
Cygnus House
30 Prince of Wales Road
Dorchester
Dorset
DT1 1PW
United Kingdom

Tel: +44 (0) 1305 265 533
Fax: +44 (0) 1305 269 960
Email: sales@cygnus-instruments.com
Website: www.cygnus-instruments.com

Cygnus USA

Cygnus Instruments Inc.
PO Box 6417
Annapolis
MD 21401
USA

Tel: +1 (410) 267 9771
Fax: +1 (410) 268 2013
Email: sales@cygnusinstruments.com
Website: www.cygnusinstruments.com

Cygnus Singapore

Cygnus Instruments (S) Pte Ltd
63 Jalan Pemimpin #05-01
Pemimpin Industrial Building
577219
Singapore

Tel: +65 6252 5909
Fax: +65 6251 1318
Email: sales@cygnus-instruments.sg
Website: www.cygnus-instruments.sg



Manufactured in the UK