



413 04042  
Oro-nasal mask for Emergency Respiratory Unit

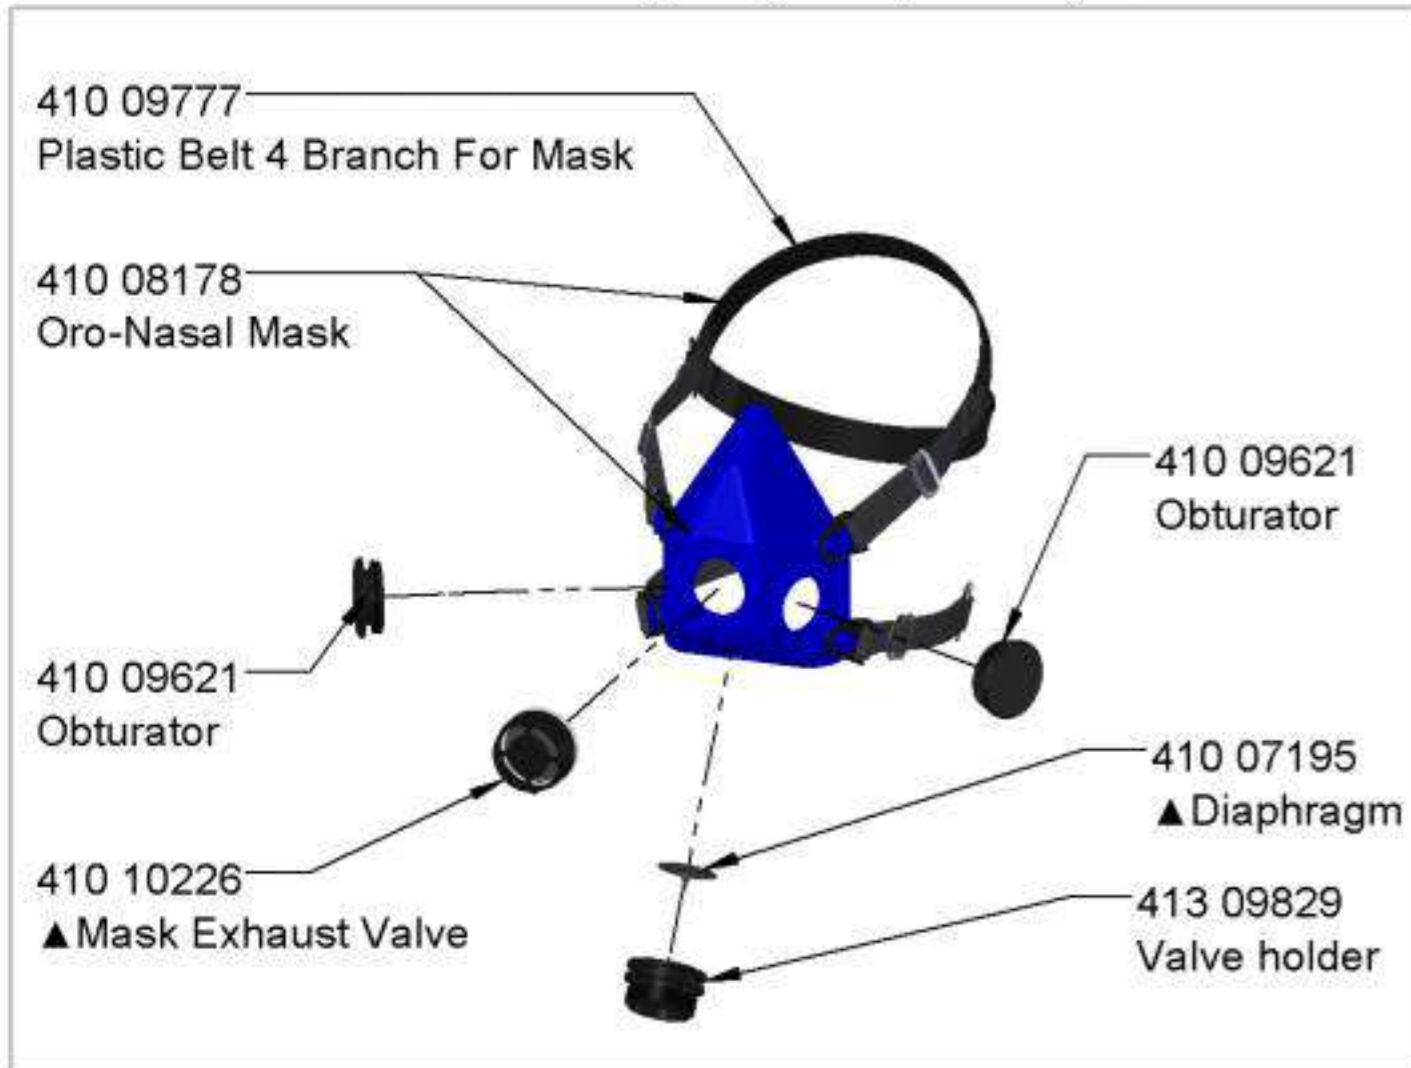

413 08172  
Corrugated Hose C/W Fittings

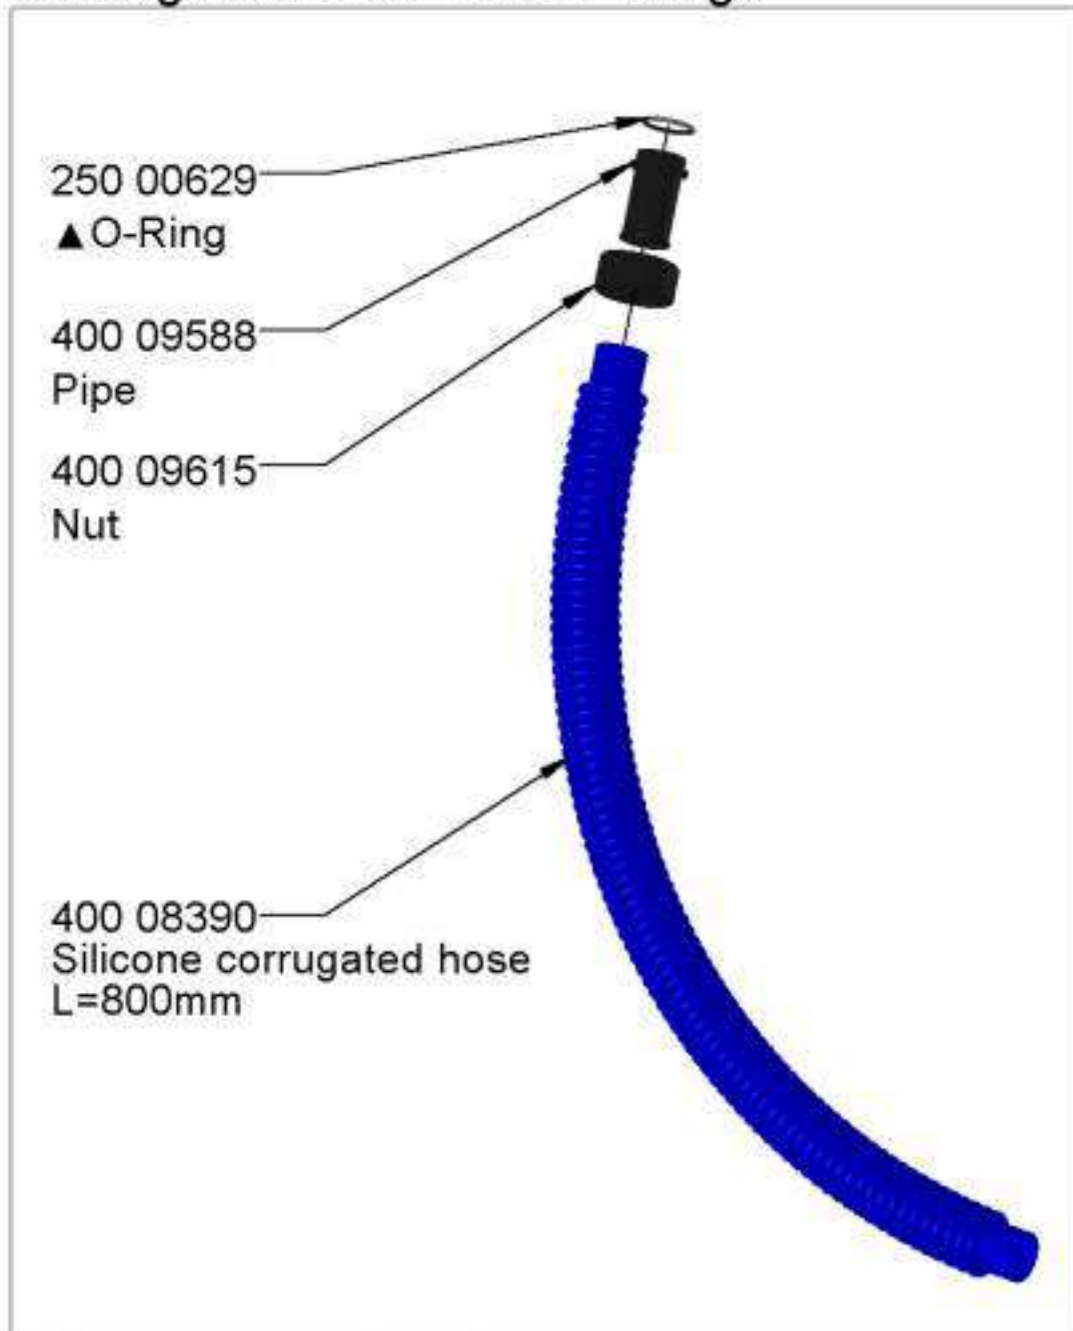


# 413 03309 - Emergency Respiratory Unit Exploded View



- Keep the Unit clean especially the Oro-Nasal Mask and the Protective Bag,
- Replace the Soda Lime (not supplied) after each use and according to supplier instructions,
- Replace the Charcoal Cartridge after a prolonged use or every year,
- Replace Parts marked ▲ every year:  
Maintenance Kit **413 10067** is available
- Weight: 1,6 kg without Soda Lime
- Dimensions: length 60 cm, diameter 12 cm

413 09822  
Filter C/W Plugs and Cartridge

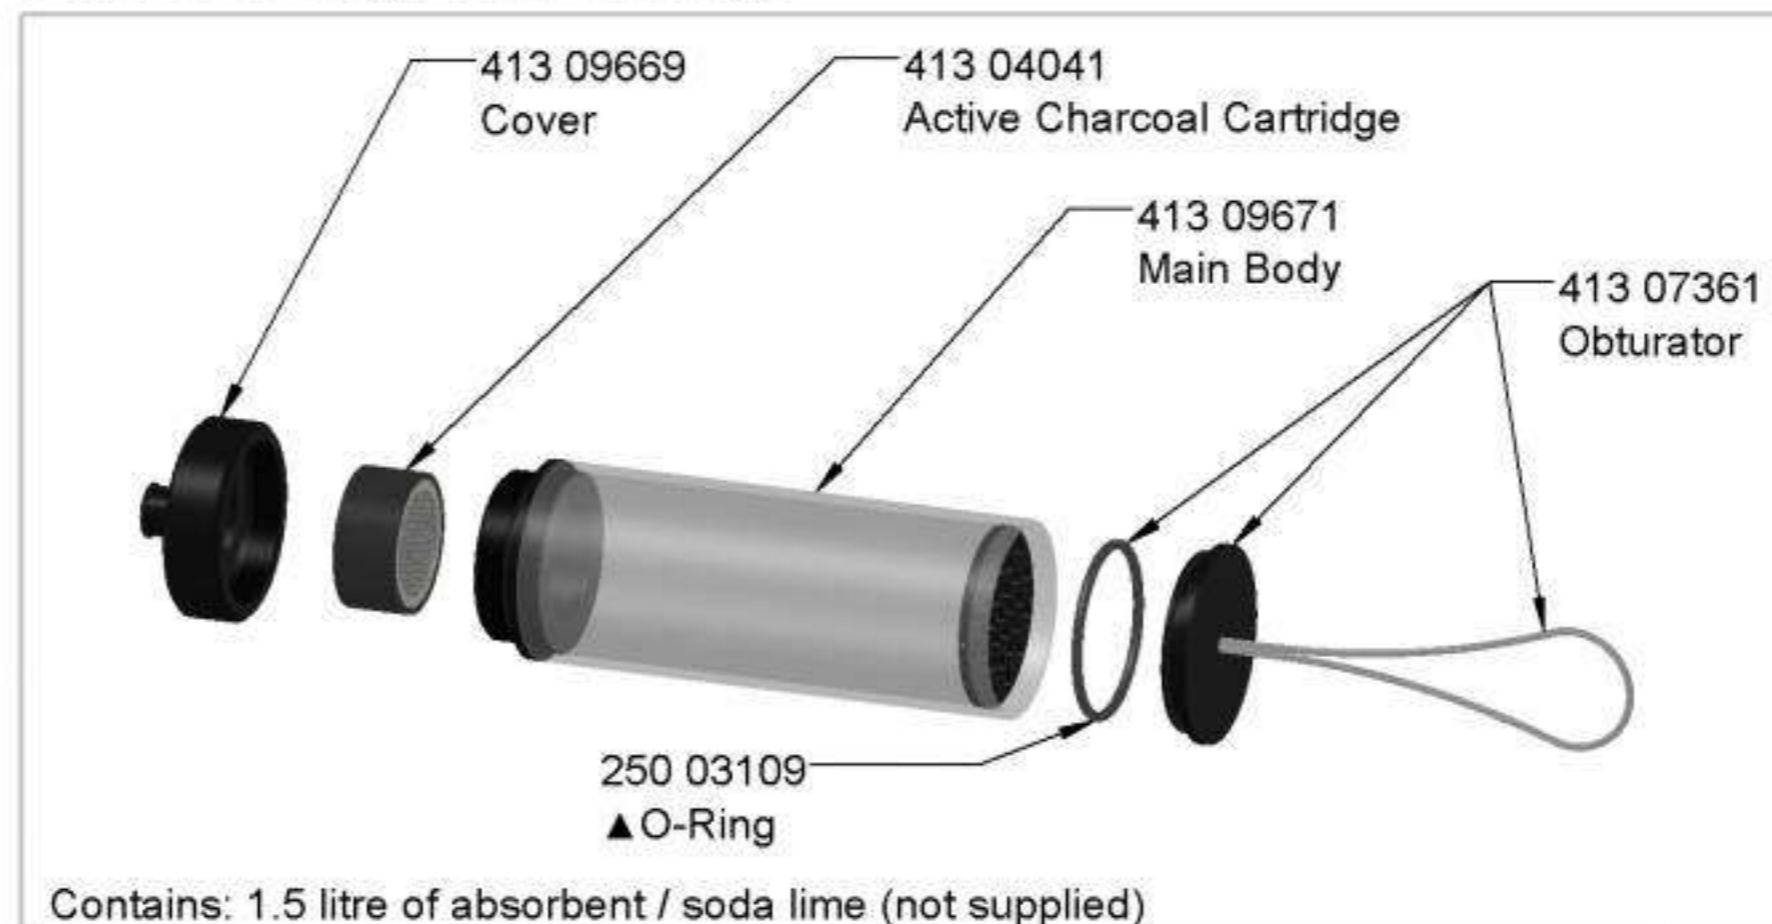

413 10067  
Maintenance Kit



▲: Components Included in Maintenance Kit