

TACTICAL AIRCREW DRY SUIT SYSTEM (MSF300 / MSF300 GB)




MUSTANG SURVIVAL WE SAVE LIVES FOR A LIVING

The MSF300 is a two-layer Aircrew Dry Suit that combines the performance of the 3 layer MAC300 into two layers allowing greater mobility with reduced bulk and lower thermal burden.

The outer shell uses a blended GORE-TEX/NOMEX® fabric that is waterproof, breathable, flame-retardant and anti-static. High-wear areas are strategically reinforced to enhance the suit's durability and prevent abrasion damage that could compromise the suit's integrity. The breathable thermal liner provides both insulation and emergency flotation and features Mustang's aerated closed-cell foam quilted with a wicking fabric that pulls excess moisture away from the body. An adjustable neck seal using Mustang's patented Closed Comfort System (CCS™) can be worn loose to provide comfort out of the water and can quickly be drawn tight to keep the water out and trim to fit neoprene wrist seals provide watertight integrity. The thermal liner can be easily removed from the outer shell to reduce thermal protection where not operationally required. An ergonomically designed rear entry allows for self donning and doffing. Integral pockets are designed for a variety of uses and facilitate access even when wearing a survival vest over the suit.

The MSF300 comes ready to wear with included universally sized dry socks, trim to fit wrist seals and CCS™ adjustable neck seal.

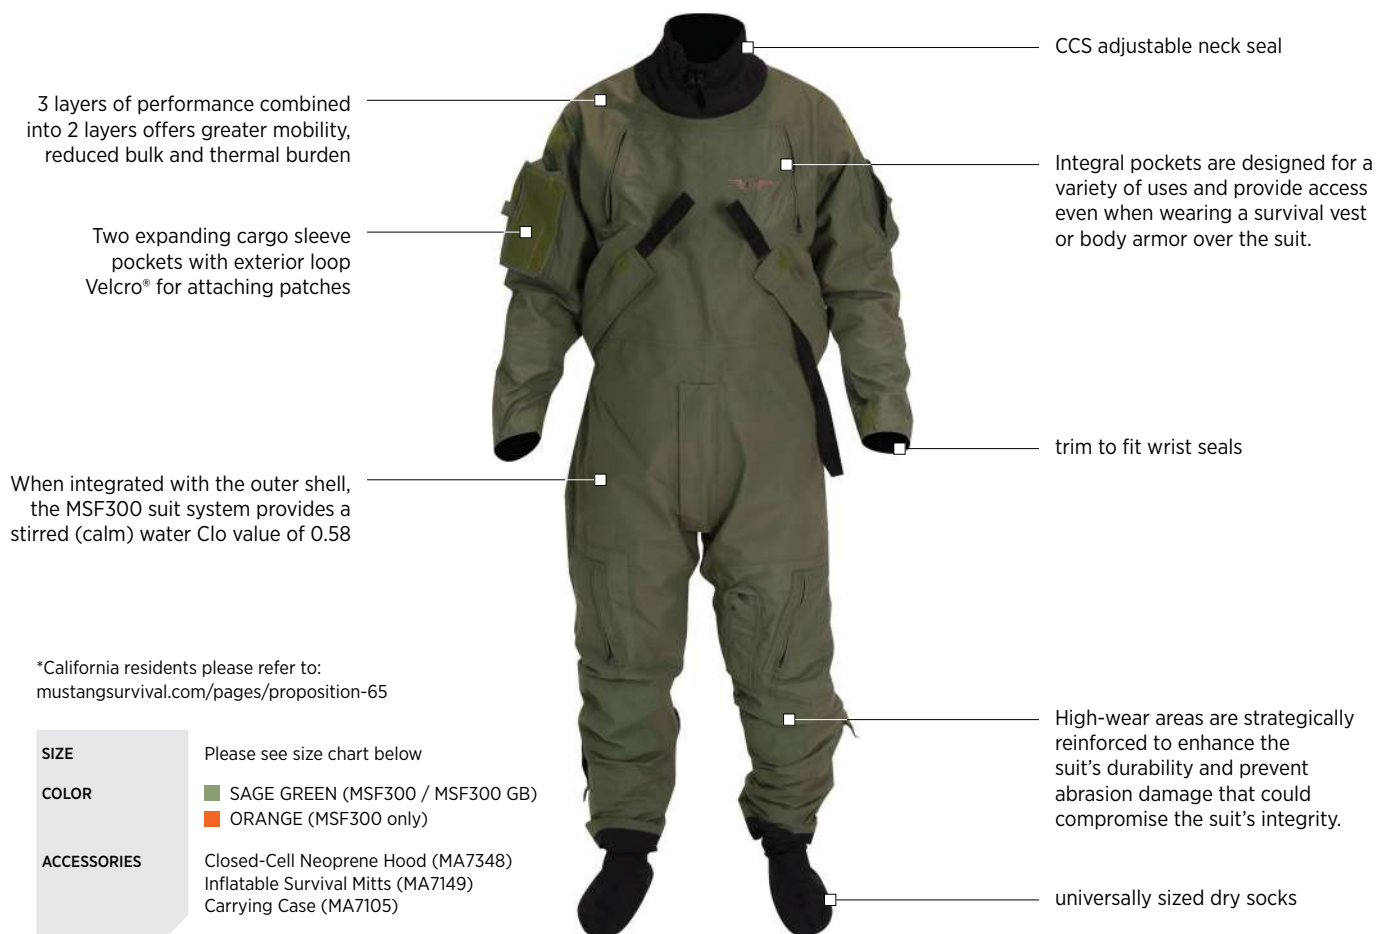

When integrated with the outer shell, the MSF300 suit system provides a stirred (calm) water Clo value of 0.58

*California residents please refer to:
mustangsurvival.com/pages/proposition-65

| | |
|--------------------|--|
| SIZE | Please see size chart below |
| COLOR | ■ SAGE GREEN (MSF300 / MSF300 GB) ■ ORANGE (MSF300 only) |
| ACCESSORIES | Closed-Cell Neoprene Hood (MA7348) Inflatable Survival Mitts (MA7149) Carrying Case (MA7105) |

| SIZE | CHEST (IN) | WAIST (IN) | INSEAM (IN) | CHEST (CM) | WAIST (CM) | INSEAM (CM) | WEIGHT (LBS) | WEIGHT (KG) |
|------|------------|------------|-------------|---------------|---------------|-------------|-----------------|---------------|
| XS | 30" - 34" | 28" | 27" | 76cm - 86cm | 71cm | 70cm | 99lbs - 154lbs | 45kg - 70kg |
| S | 34" - 38" | 28" - 30" | 27.5" | 86cm - 96cm | 71cm - 76cm | 70cm | 99lbs - 154lbs | 45kg - 70kg |
| M | 38" - 42" | 32" - 34" | 31" | 96cm - 107cm | 81cm - 86cm | 79cm | 132lbs - 198lbs | 60kg - 90kg |
| L | 42" - 46" | 36" - 38" | 32" | 107cm - 117cm | 91cm - 97cm | 81cm | 176lbs - 242lbs | 80kg - 110kg |
| XL | 46" - 50" | 40" - 42" | 33" | 117cm - 127cm | 102cm - 107cm | 84cm | 198lbs - 276lbs | 90kg - 125kg |
| XXL | 50" - 54" | 44" - 46" | 34" | 127cm - 137cm | 112cm - 117cm | 86cm | 242lbs - 309lbs | 110kg - 140kg |
| XXXL | 54" - 58" | 48" - 50" | 35" | 137cm - 147cm | 122cm - 127cm | 89cm | 275lbs - 352lbs | 125kg - 160kg |