

VIKING

PROTECH II

Flexible dry suit for a wide range of applications

Designed for maximum comfort in a wide range of applications.



Industries

- Law Enforcement
- Fire and Rescue
- Defense
- Diving


Applications

- Underwater Search and Recovery
- Disaster Recovery
- Inspection Diving
- Maintenance inspection
- Military Diving

KEY FEATURES & BENEFITS

- Extremely flexible and comfortable suit
- Ideal for military operations and for law enforcement & fire rescue teams where flexibility is essential
- Internal stitched and taped seams
- External vulcanised seams
- Easy to clean exterior when contaminated
- Easy to repair in the field minimizing downtime

Seam Diagram

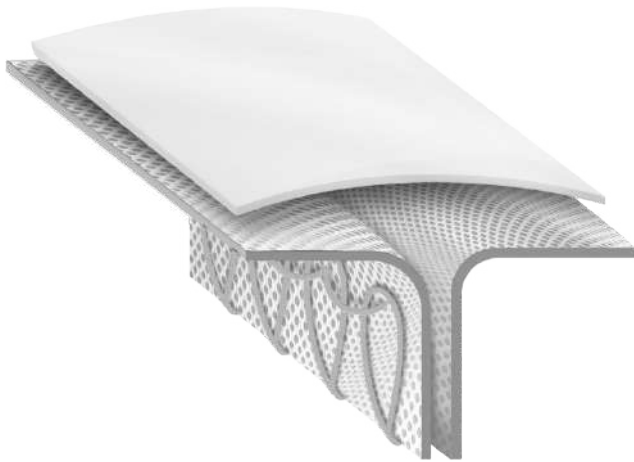

Performance Standards



EN 14225-2:2017 HZ Chemical Resistance

0598

Product Information

Product Information	
Color	Black
Country Of Origin	Lithuania
Product Material	Blend of natural and synthetic rubbers (NR/EPDM), on a stretch polyamide/elastane lining.
Product Reference	PROTECH II
Reinforcements	Additional layers of anti-slip textured rubber are applied to areas at risk of wear. The shoulders, zipper and waistband are reinforced. The trouser rear reinforcement extends around the thigh and across to the front of the legs, and down to the boots.
Seam Type	Stitched and Taped
Available Sizes	S, M, L, XL, 2XL, 3XL
Standards Overview	<ul style="list-style-type: none">• EN 14225-2:2017• HZ chemical approval• BIO micro-organism approval

Suit Components & Accessories

Suit Components and Accessories	
Design Features	Rear entry design.
Neck Seal	Fitted with a Surveyor latex neck seal as standard. Option: VIKING™ Quick Neck system, which allows for quick changing of broken seals.
Cuffs	Latex PRO cuffs are the standard fitment. Options: A rubber cuff ring system or the VIKING™ Bayonet Ring System. Both systems make the fitment of rubber gloves possible.
Footwear And Attachments	Rubber coated 5 mm neoprene boots. The boots feature a non-slip outsole and a heel fin retainer. Alternative options are available.
Zipper	Heavy Duty (HD) non-magnetic, 90 cm long. The zipper is placed across the shoulders.
Included With Each Delivery	Each suit comes supplied with suspenders, carry bag, user manual, repair kit and zip care materials.

For additional information visit us at www.ansell.com, or call us at

Europe, Middle East & Africa Region
Ansell Healthcare Europe NV
T: +32 (0) 2 528 74 00

North America Region
Ansell Healthcare Products LLC
T: +1 800 800 0444

Australia
Ansell Limited
T: +61 1800 337 041

Asia Pacific Region
Ansell Global Trading Center
T: +603 8310 6688

Latin America & Caribbean Region
Ansell Commercial Mexico S.A. de C.V.
T: +52 442 248 1544 / 248 3133

Ansell, ® and ™ are trademarks owned by Ansell Limited or one of its affiliates. US Patented and US and non-US Patents Pending; www.ansell.com/patentmarking © 2025 Ansell Limited. All Rights Reserved.

Neither this document nor any other statement made herein by or on behalf of Ansell should be construed as a warranty of merchantability or that any Ansell product is fit for a particular purpose. Ansell assumes no responsibility for the suitability or adequacy of an end user's selection of gloves for a specific application.

