

SDA He

by **ANALOX**

Protecting the **professional diver**



The **SDA is a range of panel/rack mountable atmosphere monitors** originally designed with the commercial diving in mind.

The **SDA He monitor** provides a full colour display of the helium reading. To achieve the best performance the SDA He must be used in conjunction with an SDA O₂ with the networking option selected.

The alarm set points and calibration can be achieved using the front panel user interface and the SDA He provides audio/visual alarms, optional data-logging and 4-20mA/relay outputs.

Helium is an expensive and vital saturation diving commodity. Monitoring the purity of the heliox in the reclaim system is vital for safety and for operations to remain cost effective.

The SDA He is normally located in sat/dive control and can be supplied in rack or panel mount configurations. Alternatively the SDA He can be placed in the helium reclaim area.

Key Features

- Large, bright full color display
- Datalogging option
- Ethernet data output

Gasses Detected

Helium (He)

Applications

- Commercial Diving



Your Challenge, **Our Passion**

Speak to our team today UK/Global: +44 (0)1642 711 400
US Office: (714) 891 4478
US Toll Free: (877) 723 3247


SDA He

Tech Spec

Sensor range 0 to 100%

Sensor accuracy $\pm 3\%$ He

SDA Range

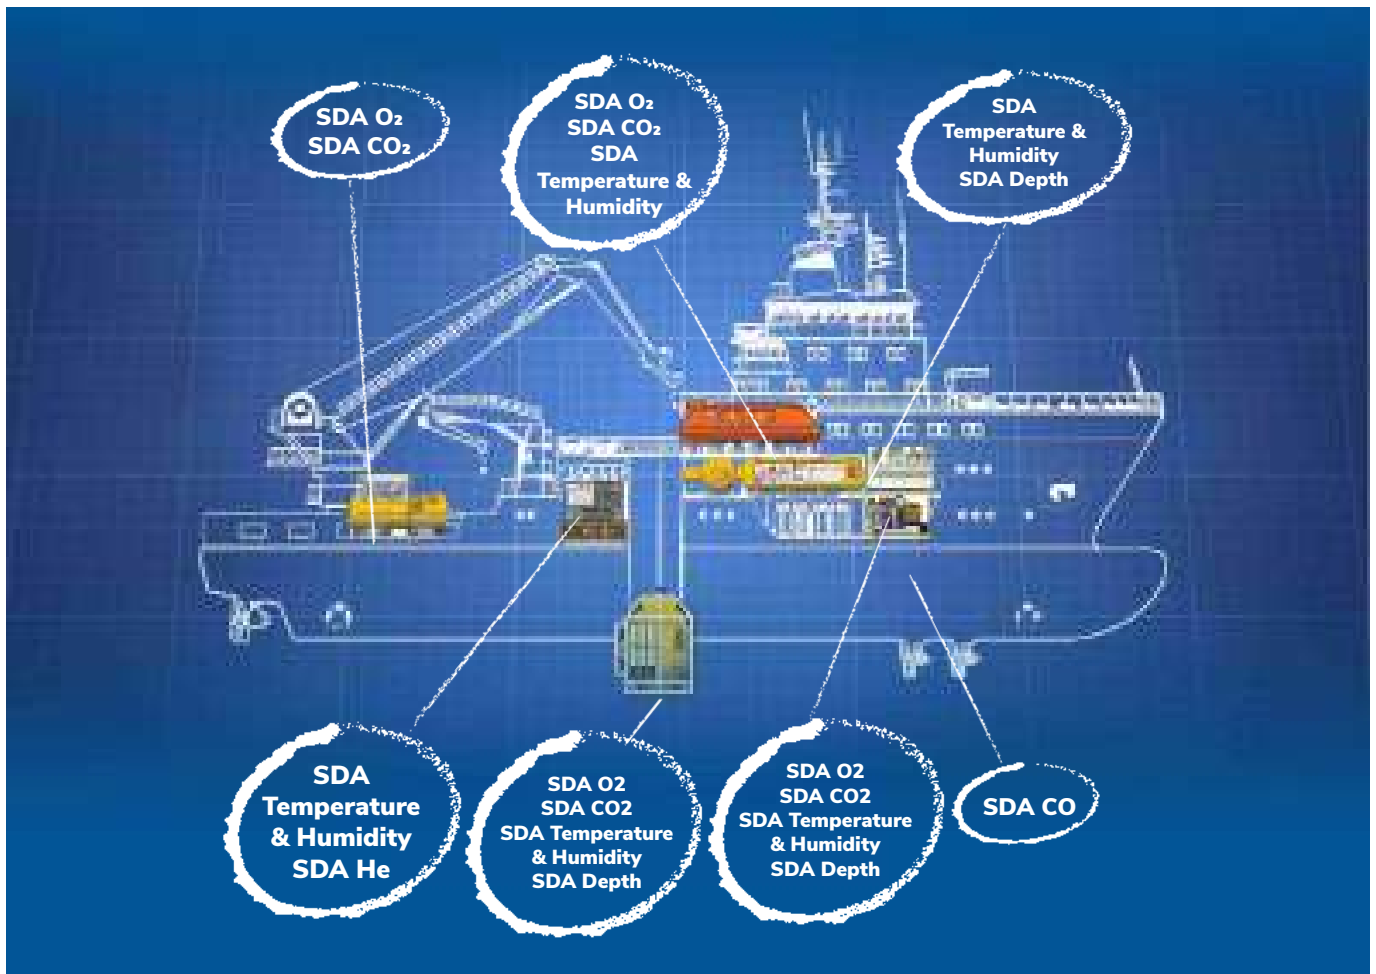

You can call us

UK/Global: +44 (0)1642 711 400

US Office: (714) 891 4478

US Toll Free: (877) 723 3247

You can email us

info@analoxgroup.com

Visit our website

analoxgroup.com

Follow us on



Analox
Group



Analox
Group

ANALOX

Your Challenge, **Our Passion**