

STANLEY®



TP08 TRASH PUMP

The STANLEY® TP08 Trash Pump is a lightweight, heavy-duty, submersible pump capable of handling high volumes of water, sand slurries, gravel, sludge, and solids up to 3 in./75 mm. It's self-priming, can run dry without damage, and uses just 9 gpm/34 lpm of hydraulic flow to pump over 800 gpm/3,028 lpm at a 10 ft/2.54 m head. Weighing 59 lbs/27 kg, it's easy for one operator to handle, with durable construction featuring a steel volute, abrasion-resistant cast iron impeller, and UHMW polyethylene wear plates. Paired with the STANLEY® HP28 Power Unit, it's perfect for high-volume dewatering and trash pump applications.


TP08 TRASH PUMP

FEATURES

- The STANLEY® TP08 Trash Pump is a lightweight, heavy duty pump capable of pumping high volumes of water, sand slurries, gravel, sludge and solids up to 3 in./75 mm in diameter
- The TP08 is submersible, self priming and can run dry without damage to the motor, bearings or impeller
- The TP08 has been designed to get the most from an HTMA Type II hydraulic circuit
- Using only 9 gpm/34 lpm of hydraulic flow, the TP08 will pump over 800 gpm/3,028 lpm at a 10 ft/2.54 m head. The free-flow impeller and 4 in./ 100 mm inlet and outlet combine to make the TP08 one of the most efficient pumps in the business.
- Weighing only 59 lbs/27 kg and with its convenient handle, the TP08 can easily be handled by one operator
- The TP08 and the STANLEY® HP28 Power Unit make a powerful, portable team for high volume de-watering and trash pump applications
- The heavy-duty construction of the TP08 features a fabricated, all steel volute and abrasion resistant cast iron impeller. The volute uses replaceable UHMW polyethylene wear plates to reduce wear and extend pump life. The heavy-duty STANLEY® HYREVZ™ hydraulic motor is self-lubricating.

SPECIFICATIONS

CAPACITY	800 GPM / 3028 LPM
WEIGHT	59 LBS / 26.7 KG
HEIGHT (OVER HANDLE)	16.5 IN. / 42 CM
LENGTH	19 IN. / 48.3 CM
WIDTH	15 IN. / 38.1 CM
PRESSURE	2000 PSI / 140 BAR
FLOW RANGE	7 - 9 GPM / 26 - 34 LPM
MAXIMUM FLOW	9 GPM / 34 LPM
PORTING	#10 SAE (PRESS.) #12 SAE (RET)
CONNECT SIZE AND TYPE	1/2 IN. MALE PIPE (PRESS.) 3/4 IN. MALE PIPE (RET)
DISCHARGE DIAMETER	4 IN. CAMLOCK
INLET DIAMETER	4 IN. / 100 MM

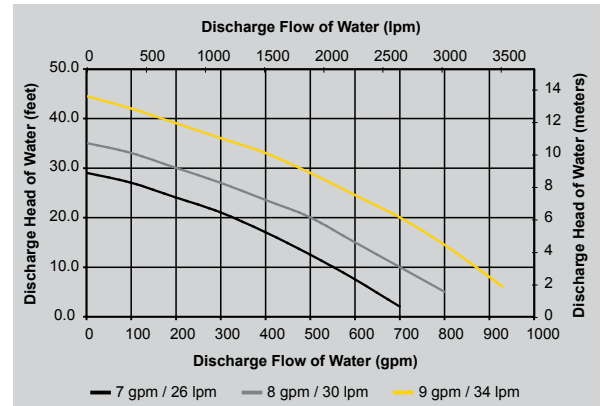

ORDER INFORMATION

PART NO.	DESCRIPTION
TP08013	4 IN. TRASH PUMP, 800 GOM/3028 LPM

ACCESSORIES

PART NO.	DESCRIPTION
21967	MALE ADAPTER / FEMALE THD 4-8 NPT
65624	LAY-FLAT DISCHARGE HOSE BLUE, 4 IN X 25 FT WITH CAMLOCK FITTINGS

STANLEY®

3810 SE Naef Road // Milwaukie, OR 97267 // 833-723-1843 // www.IndustrialToolsAndAttachments.com