

TECHELP

SERVICE BULLETIN

TECHELP NO. 9 (Revised)


October 1, 1978

MAXIMUM SPEED CONTROL — CUT-OFF WHEELS, CHAINS SAWS, GRINDERS AND OTHER TOOLS

The accompanying chart will allow you to select the quantity of oil to use in order to operate your cut-off wheels, saws and grinders without exceeding the maximum RPM recommended for the tool.

You may limit your maximum GPM by installing a fixed control valve in the hydraulic system or supply line. This is particularly important for rental equipment which may be used on a variety of hydraulic systems.

For general information, we have listed on the reverse side the recommended maximum GPM for Stanley Hydraulic Tools and suggest that this be passed on to dealers, customers and service people.

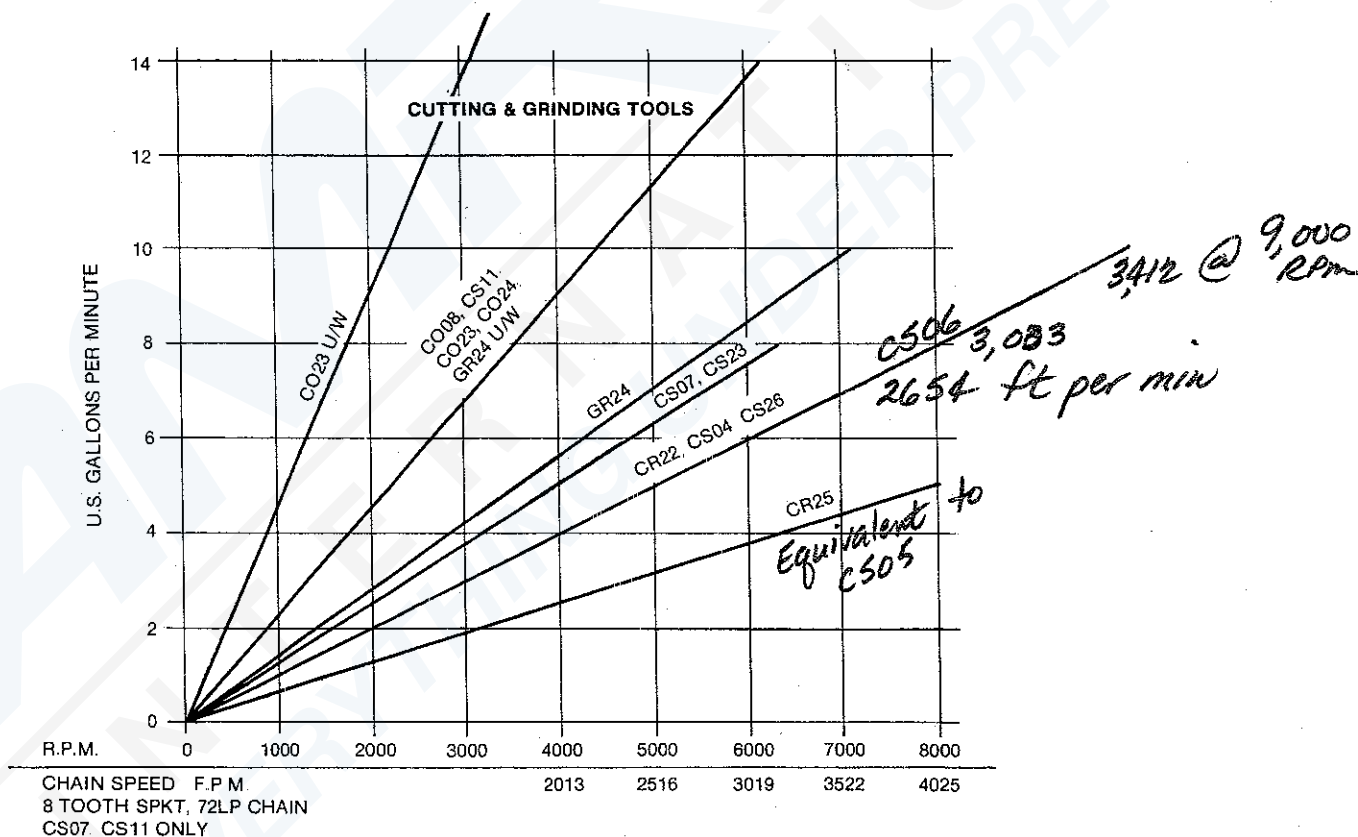

The service life of all Stanley Hydraulic Tools will be extended if the recommended maximum RPM or GPM is not exceeded.

(over)